

Elinchrom Flash Unit	Enter Update Mode	Requirements	Information
ELC 125 / 500	Plug the USB cable into the unit and computer, then connect the mains cable and launch the Updater.	Updater Software +  or  USB Cable Elinchrom Bridge	Wireless update procedure via the Elinchrom Updater. Follow the instructions on the Updater Software to update your Elinchrom unit.
ELC Pro HD 500 / 1000	Switch the Unit OFF, hold the USER button and press also ON until the display shows “firmware update”.  +  + hold 3 seconds The Update process must run twice, there are 2 Micro controller to be updated.	Updater Software +  Elinchrom Bridge	
ELB 400	Connect the unit via the USB cable to your computer.  +  + hold 3 seconds	Updater Software +  USB Cable USB-A to USB-Micro USB-A to USB-Mini for the Transmitter	Update via USB connector and the Elinchrom Updater
ELB 1200	Connect the unit via the USB cable to your computer.  +  + hold 3 seconds		
ELB 500 TTL	The “Update Mode” is not required, just connect the USB cable to the device and the computer and start the Updater.		
Transmitter Pro / Plus HS			
Elinchrom Bridge	Plug the USB cable into the Bridge and the computer. Hold  for 5 seconds LED flashes twice every second in yellow. Start Updater		

Download the Updater Software:

https://www.elinchrom.com/support_downloads.php?q=software+updater

Firmware Release Notes:

<https://www.elinchrom.com/support/firmware-release-notes.html>