

Confidentiality level class 2:

This document intended for a restricted public only (Official Elinchrom agents, partners, suppliers, manufacturers or outsourcers). Any third party dissemination, distribution, copying or use of these documents, without prior permission, is strictly prohibited.

ELC Traffic – Manual Firmware Update

Update through EL-updater :

- 1) Put the unit to update in update mode.



Maintain these two buttons pressed -> while plugging the mains cable until the unit show the « Firmware Update» screen.


- 2) Download and install the EL-updater from this link :

https://www.elinchrom.com/wp-content/uploads/elinchrom_updater_2.40_windows.zip

- 3) Plugg the EL-bridge 19338 in the PC and power it on by pressing 1s on the button. (Led blinks green on the bridge)



- 4) Launch the EL-updater, select the same frequency channel as the Unit to update and press on «Scan». The ELC shall be detected :

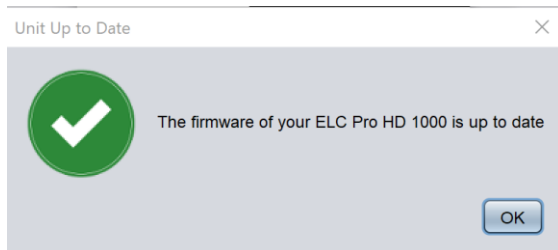


Click on « OK ». The following screen shall appear:

Confidentiality level class 2:

This document intended for a restricted public only (Official Elinchrom agents, partners, suppliers, manufacturers or outsourcers). Any third party dissemination, distribution, copying or use of these documents, without prior permission, is strictly prohibited.



From this window, click on « ctrl » + « shift » + « F6 ». The following screen shall appear:

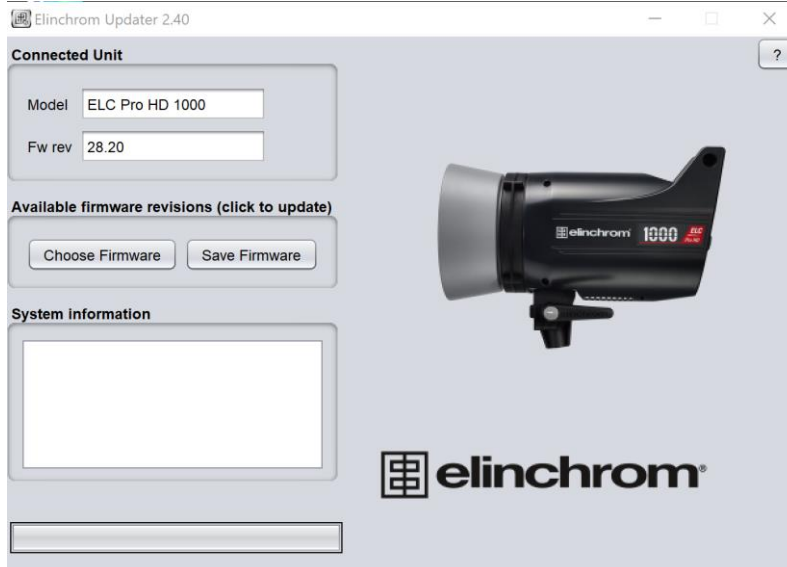

Click on «Choose Firmware» and select the «elfirmware_elc_series_master_r80.elx». Wait until the end of the update and switch off the unit.