

Confidentiality level class 2:

This document intended for a restricted public only (Official Elinchrom agents, partners, suppliers, manufacturers or outsourcers). Any third party dissemination, distribution, copying or use of these documents, without prior permission, is strictly prohibited.

Date: 19.11.2012

Ref. : D. Agier


Department: R&D

### Short description of the work to perform

- It is not necessary to disconnect the head cable; only release the cable holder to have longer wire ends.
- You need to receive from Elinchrom a modified printed circuit board depending on the head:

	Lamp head		S-Assy board	Note
	Designation	Item Nr	Item Nr	
1	Digital SEE – 230V	20172	610.302	
2	Digital SE – 230V	20174	610.302	
3	Digital S – 230V	20150	610.302	
4	A3000	20168	610.301	

- Mark carefully the wire colors on the board before unsoldering or disconnecting them! The re-assembling with the new board will be easier!

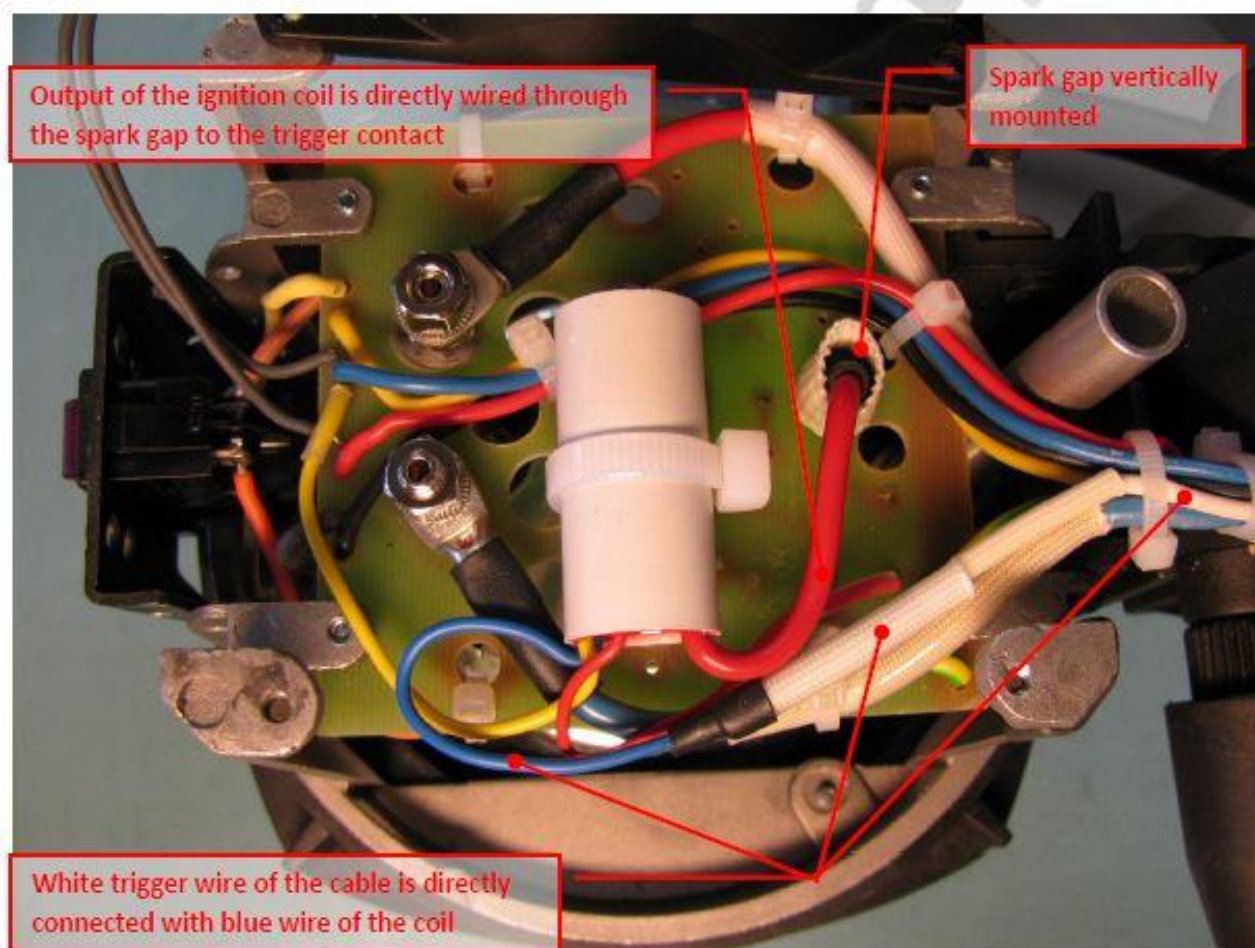

If you have sometimes the switching off of the RCCB (Residual Current Circuit breaker):

1. Check the building electrical wiring is conform
2. Request the modified boards by filling the Warranty Form.

Do not hesitate to ask for further information [dominique.agier@elinchrom.ch](mailto:dominique.agier@elinchrom.ch)