

## Screen Views



### Work Screen

Shows the most important settings, once the unit is configured. Displayed automatically after 45 sec of inactivity.



Back Save Exit


### Sub-menu Screen

Select feature by scrolling.



Swipe left or right to change value between the arrows

## Screen Lock

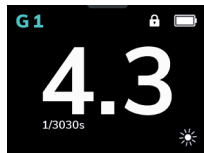

To activate the touch screen lock, press the ON button whilst powering on the unit for 9s. The lock symbol indicates that the touch screen is locked. To unlock switch the unit off and on again.



## Connection



The ONE should only be used between -10°C and 40°C. Only charge the ONE between 0°C and 40°C.

USB-C socket for charge and firmware update.

### USB C Charger

Use only the original Elinchrom One USB Charger to recharge the built-in Li-Ion battery.

When the unit is OFF the side logo color shows the charge status:

Red: recharging  
Orange: almost charged  
Green: the unit is charged

Recharging time: 90 min. to 100%

Battery capacity min./max power: 8000 / 800 flashes per charged battery.

### Reset To Default Settings

Switch the unit on, and release the ON button. When the EL Logo appears press immediately the "ON" and "Menu" button for 4 seconds until the display shows "Reload all default parameters".



[www.elinchrom.com](http://www.elinchrom.com)



Elinchrom is a registered trademark of ELINCHROM LTD, RENENS, SWITZERLAND

QSG ONE - 04.2020

Av. de Longemalle 11, CH-1020 Renens, Switzerland,  
Tel. : + 41 21 637 26 77 Fax: +41 21 637 26 81 E-mail: [support@elinchrom.ch](mailto:support@elinchrom.ch)

 elinchrom®

# ONE



## Quick Start Guide

## Setup Menu

**Action mode**  
Switch on/off
 **Settings**  
Submenu access
 **Sound**  
Switch on/off

**Photocell**  
Switch on/off
 **Airplane mode**  
Switch on/off

<b>Settings</b>	Flash before ready	Yes/No
	Flash scale	EL-Scale, 0-10, Ws
	Modlamp VFC	Off/On
	Modlamp Timer	Off/15/30/60"
	Modlamp Scale	F-stop/Percent
	Favorite function	Modlamp/Flash mode/Audio/Photocell/Recycling mode
	Auto stand-by	Off, 1 to 59 min. Auto-off and auto stand-by shall be set independently. Auto stand-by cannot disable auto off.
	Auto-off	Off, (Auto stand-by+1) to 60 min. It shall be longer than Auto stand-by. Minimum value = auto stand-by + 1min.
	EL logo mode	Low, High, Off, Low on ready, High on ready
	EL logo color	Group color, White
	Ready tone	1, 2, 3
	Ready volume	Off, Low, Medium, High
	Keyboard click	Off/On
	Skyport	Off/On
Wifi settings	Setup wifi SSID and password	

To access the menu short tap on screen with 2 fingers

**G4** Groups  
Swipe to choose the Group
 **LED Presets**  
Select, the LED color temperature
 **F20** Frequencies  
Swipe to choose the frequency

**Background**  
Switch to black or white
 **Info**
**Bluetooth**  
Switch on/off

<b>Info</b>	Friendly name	"ELC XXX-1" by default (set through computer), XXX = 125 / 500 depending on the model
	Firmware rev.	*****
	Skyport ID	*****
	Life time	In hours (hhh:mm)
	Power-on count	How many times the units has been turned on
	Flash count	Total flash number

## Control Panel / Touch Screen




**Save button:** press to validate your choice  
 CW: +0.1 f-stop / down  
 CCW: -0.1 f-stop / up

## Display Panel – Dashboard

The colour of the Group corresponds to the group number : blue for group 1, yellow for group 2, red for group 3 and green for group 4. The Elinchrom logo on the side of the unit illuminates with the color of the selected group.



- Group 1-4
- Modelling lamp menu
- Battery status
- Favorite Function; default setting is Mod. Lamp on/off
- Power value
- Flash duration

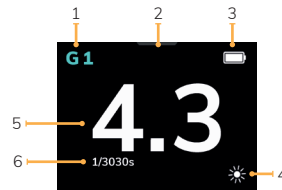

## Modelling Lamp

Swipe down to access the modelling lamp menu

Swipe left/right to change values



Short touch to access and change the colour temperature

